



Canon PowerShot G16 Button Circuit Board Replacement

This guide will show users how to replace their broken button memory board. Consider this repair if your Canon PowerShot G16's buttons are unresponsive or broken

Written By: Jonathan Harger



INTRODUCTION

Please follow these steps to replace the button memory board.

TOOLS:

- [Fingers](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [Anti-Static Wrist Strap](#) (1)
-

Step 1 — Battery



- Open the battery flap on the bottom of the camera by applying pressure and pushing in the direction of the arrow.
- Remove your finger and allow the flap to pop open.

Step 2



- Push the brown lever so that it pivots counterclockwise.
- Grip and remove the battery.

Step 3 — Button Circuit Board



- Remove the ring around the lens by simultaneously pressing the black button located at the bottom right of the ring and rotating the ring counterclockwise.

Step 4



- Remove the four 3.3 mm screws on the bottom of the camera using a Phillips #00 screwdriver.

Step 5



- Remove the 3.3 mm screw on the right side of the viewfinder using a Phillips #00 screwdriver.

Step 6




- Remove the two 3.3 mm screws near the speaker using a Phillips #00 screwdriver.

Step 7



- Open the port cover by lifting up the tab with your finger and remove the 3.3 mm screw underneath the cover using a Phillips #00 screwdriver.
- Remove the other 3.3 mm screw below the ports using a Phillips #00 screwdriver.

Step 8

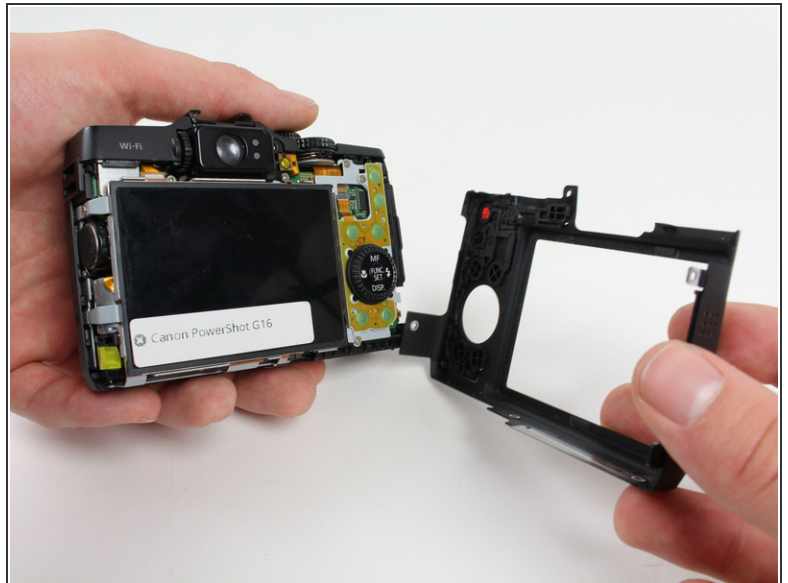



- Using your fingers, carefully pull the the back cover off by grabbing the bottom left of the back cover and pulling outwards.

Step 9




- Using your fingers, carefully pry the front cover off starting at the bottom right.

Step 10

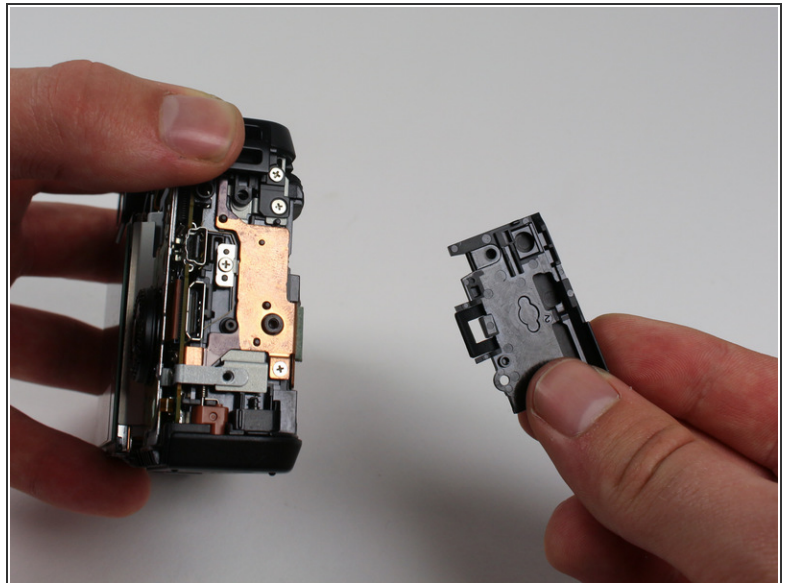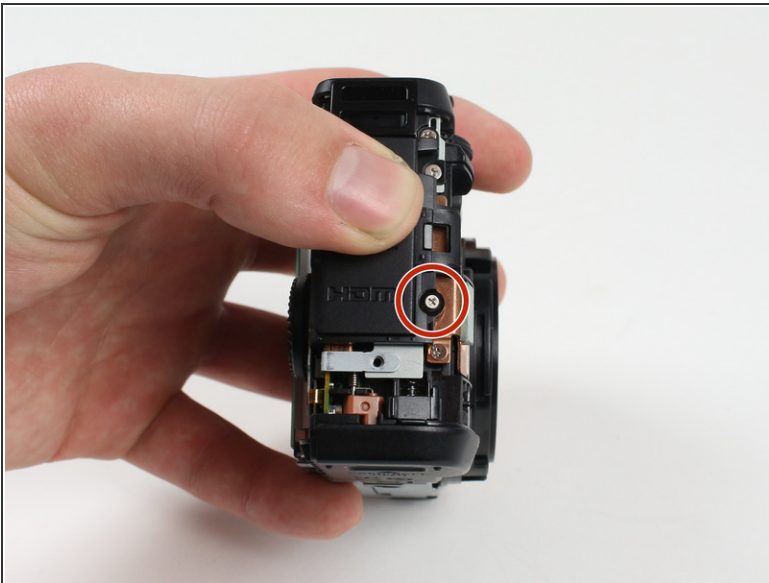

- Remove the 3.8 mm screw at the bottom right of the port cover housing using a Phillips #00 screwdriver.
- Lift away the port cover housing.

Step 11

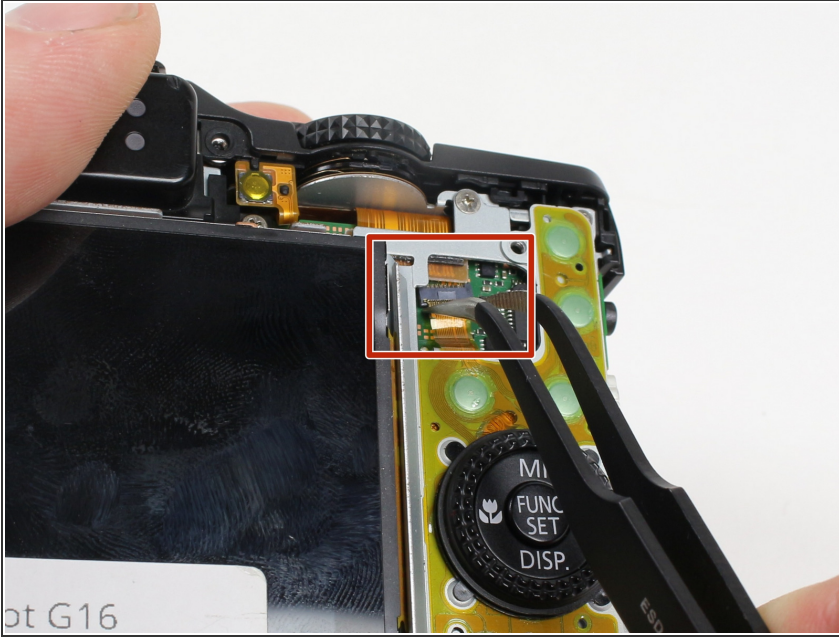

- Reorient the camera so that you are looking at the back.
- ⚠ Make sure to pull the connector straight down as pulling up may cause harm to the connector.
- Unplug the button circuit board from the motherboard by pulling the connector downwards with the tweezers.

Step 12



- Remove the 3.0 mm screw on the top of the button memory board using a Phillips #00 screwdriver.
- Remove the 2.8 mm screw on the bottom of the button memory board using a Phillips #00 screwdriver.

Step 13



- Lift the button circuit board away from the camera.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-17 02:04:20 AM.